

TBP22 / TBSD24

METHOD STATEMENT (MS)


TBSD24 Application

- Should be installed in the midpoint along the outside of the tie bolt sleeve. It must have a minimum concrete cover of 80mm.
- Wetting the tie bolt sleeve will make the installation easier.
- Due to its composition each Hydroswell TBSD24 can be installed on sleeves of between 24mm & 30mm external diameter.
- Installation of the product under continuous rain should be avoided since early activation might occur.
- If early activation occurs, the product will return to its original dimensions once dry.



TBP22 Application

- Remove cone any loose detritus from the hole and tie bolt sleeve.
- Due to its composition is suitable for use with tie bolt sleeves with an internal diameter between 21.5mm – 22.2mm.
- Install the Hydroswell TBP22 manually into the spacer.
- Hit Hydroswell TBP22 into the tie bolt sleeve with a hammer until fully inserted.
- No finishing or after treatment required.

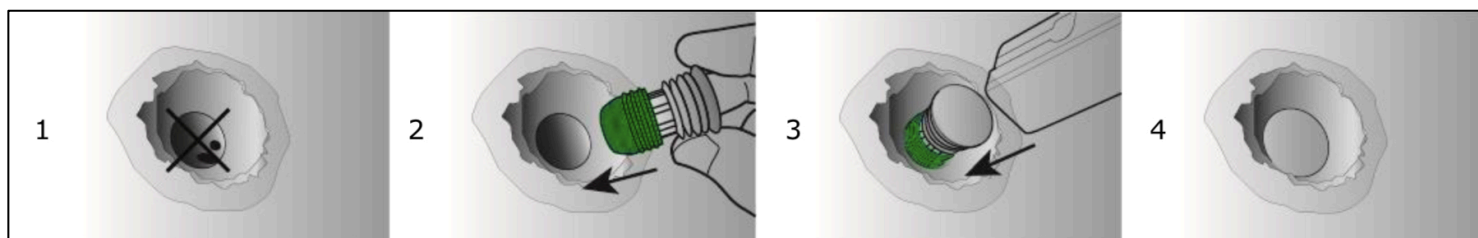

Safety

A copy of all relevant MSDS are available for download from www.smrhydroswell.co.uk

Contact Details

SMR Projects Ltd
SMR House
Beaumont Close
Banbury
OX16 1TG

Telephone: 01295 279747

Web address: www.smrhydroswell.co.uk